
















Original	Substituto
 Standby	 Power
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I / II
 Mute	 Mute / Dimmer
 <<<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 I<<<	 I<<< / Preset-
 >>>	 >>> / Tune+
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Menu	 Menu / Home
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear
 Left / Vol-	 Left
 Left / Vol-	 Vol-

Original	Substituto
 OK	 OK
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 Record	 Rec / Rec Mode
 Down / CH-	 CH- / Page-
 Down / CH-	 Down
 Timeshift	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 --	 Guide / EPG / -/-
 4	 4
 5	 5
 6	 6
 Recall	 Back / Return
 7	 7
 8	 8





	Original	Substituto		Original	Substituto
	9	 9			
	0	 0			
	--	 Fav / Marker / PC			
	Device	 Smart / List			
	File	 Display / Media			
	Repeat	 Shift + Green / APP /			
	Teletext	 Text / Goto			
	Mosaic	 Picture / Format			
	TV/Radio	 TV/Radio /			
	Info	 Info / Angle			
	Red	 Red / Netflix / Search			
	Green	 Green / APP / Repeat			
	Yellow	 Yellow / YouTube / Repeat			
	Blue	 Blue / Prime Video / Random			

	Original	Substituto		Original	Substituto

