 



 

























Original	Substituto	Original	Substituto
 Power	 Power	 0	 0
 Mute	 Mute / Dimmer	 ENT	 Fav / Marker / PC
 I-II	 Audio / Lang I/II	 Vol+	 Vol+
 Scale	 Smart / List	 TV	 TV/Radio /
 Sleep	 Sleep / Timer	 TV	 Shift + 1
 Display	 Display / Media	 CH+	 CH+ / Page+
 Text	 Text / Goto	 Vol-	 Vol-
 1	 1	 Input	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Exit	 Exit / Cancel / Clear
 4	 4	 Up	 Up
 5	 5	 Menu	 Menu / Home
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 S.Mode	 Sound / Title
 Jump	 Back / Return	 Down	 Down





	Original	Substituto	
	P.Mode	 Picture / Format	
	Red	 Red / Netflix / Search	
	Green	 Green / APP / Repeat	
	Yellow	 Yellow / YouTube / Repeat	
	Blue	 Blue / Prime Video / Random	
	Text Index	 Info / Angle	
	Text Reveal	 Subtitle / EQ	
	Text Size	 Zoom / Size	
	Text Hold	 Stop / Hold	

	Original	Substituto

