







 















































Original	Substituto	Original	Substituto
 Standby	 Power	 Down	 Down
 Info	 Info / Angle	 FAV	 Fav / Marker / PC
 Subtitle	 Subtitle / EQ	 1	 1
 Mute	 Mute / Dimmer	 2	 2
 CH+	 CH+ / Page+	 3	 3
 Recall	 Back / Return	 Page+	 Shift + CH+ /
 Vol+	 Vol+	 4	 4
 CH-	 CH- / Page-	 5	 5
 Pause	 Pause / Step / Freeze	 6	 6
 Vol-	 Vol-	 Page-	 Shift + CH- /
 Menu	 Menu / Home	 7	 7
 Up	 Up	 8	 8
 Exit	 Exit / Cancel / Clear	 9	 9
 Left	 Left	 0	 0
 OK	 OK	 Audio	 Audio / Lang I/II
 Right	 Right	 Lang	 Shift + Audio / Lang I/II
 EPG	 Guide / EPG / -/-	 Tv/Radio	 TV/Radio /





Original	Substituto	Original	Substituto
 TTX	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

