







 






























Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	I-II/Audio		Audio / Lang I/II
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Original	Substituto	Original	Substituto
	-/--/+10		Guide / EPG / -/--
	QV		Info / Angle
	Tv Menu		Menu / Home
	Tv/Text		Text / Goto
	Mix		Setup / OPT /
	Call		Back / Return
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	P-		CH- / Page-
	P+		CH+ / Page+
	Red/DVD Setup		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Substituto	Original	Substituto
	Yellow Yellow / YouTube / Repeat		<< / Tune-
	Blue Blue / Prime Video / Random		>> / Tune+
	Subtitle Subtitle / EQ		
	Pause Pause / Step / Freeze		
	Play/Hold Play / Slow		
	Zoom/Size Zoom / Size		
	D.Disp/Reveal Display / Media		
	D.Menu D.Menu / Top		
	Up/Index DVD Shift + Up		
	I<</Cancel I<< / Preset-		
	>>I/Subpage >>I / Preset+		
	Left DVD Shift + Left		
	Enter DVD Shift + OK		
	Right DVD Shift + Right		
	Eject Eject / Surround		
	Stop Stop / Hold		
	Down DVD Shift + Down		

