






























 







Original	Substituto	Original	Substituto
On/Off	 Power	Menu	 Menu / Home
Mute	 Mute / Dimmer	Menu Up	 Up
Reveal	 Play / Slow	Info	 Info / Angle
Store	 Pause / Step / Freeze	Menu Left	 Left
Txt Stop	 Stop / Hold	OK Enter	 OK
Tune-	 << / Tune-	Menu Right	 Right
Tune+	 >> / Tune+	Menu Off	 Exit / Cancel / Clear
Update	 I<< / Preset-	Menu Down	 Down
Aft/Caf	 >>I / Preset+	Volume+	 Vol+
Color- S.Std	 Sound / Title	Bright+ Mode	 Smart / List
Menu audio	 Audio / Lang I/II	Chan.Up	 CH+ / Page+
Color+ P.Std	 Picture / Format	Volume-	 Vol-
Sleep Timer	 Sleep / Timer	Display	 Display / Media
Return TV	 TV/Radio /	Chan.Down	 CH- / Page-
Menu video	 D.Menu / Top	1	 1
Bright- Sys	 Setup / OPT /	2	 2
TV/AV	 AV / Input / RDS	3	 3



Original	Substituto	Original	Substituto
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Search	 Red / Netflix / Search		
Yellow	 Yellow / YouTube / Repeat		

