

 


 



 

 

 

 

 





 





 





 

 





Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Still	 + 	Shift + Pause / Step /
	I/II		Audio / Lang I/II
	Power		Power
	Scan		Smart / List
	Sleep		Sleep / Timer
	PIP		Picture / Format
	Display		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Original	Substituto	Original	Substituto
	TV/AV		AV / Input / RDS
	0		0
	Swap		Back / Return
	P.STD		Setup / OPT /
	S.STD		Sound / Title
	Up		Up
	CH+		CH+ / Page+
	Vol-		Vol-
	Left		Left
	Menu		Menu / Home
	OK		OK
	Right		Right
	Vol+		Vol+
	CH-		CH- / Page-
	Down		Down
	[=]		Text / Goto
	[+]		Subtitle / EQ





	Original	Substituto		Original	Substituto
	[/=]	PROGRAM TV/RADIO /			
	<</[...]	TUNE- << / Tune-			
	>>/[?]	TUNE+ >> / Tune+			
	[X]	PC Fav / Marker / PC			
	Red/↑	NETFLIX Red / Netflix / Search			
	Green/←	APP Green / APP / Repeat			
	Yellow/→	YouTube Yellow / YouTube / Repeat			
	Blue/Enter/H.Lock	Prime Video Blue / Prime Video / Random			
	White/↓/CH.List	GUIDE Guide / EPG / -/--			
	Pause/Timer	STEP-FREEZE Pause / Step / Freeze			
	[◇]/Zoom	SIZE Zoom / Size			
	Exit	CLEAR Exit / Cancel / Clear			

	Original	Substituto		Original	Substituto

