 



 



















 











 





 







 



 

 



 





 





Original	Substituto	Original	Substituto
 Power	 Power	 Timeshift	 Text / Goto
 Play	 Play / Slow	 Input	 AV / Input / RDS
 Still/Pause	 Pause / Step / Freeze	 DVD Menu/Original	 Menu / Home
 Stop/Live	 Stop / Hold	 Up	 Up
 Rec	 Rec / Rec Mode	 CH Display	 Info / Angle
 <</REV	 << / Tune-	 Left	 Left
 >>/FWD	 >> / Tune+	 Set/Enter	 OK
 I<< Skip/<I	 I<< / Preset-	 Right	 Right
 F.ADV II>/Skip	 >>I / Preset+	 Exit	 Exit / Cancel / Clear
 DVD Title/Rec List	 Sound / Title	 Down	 Down
 Audio	 Audio / Lang I/II	 Return	 Back / Return
 Subtitle	 Subtitle / EQ	 Vol+ Tv	 Vol+
 Open/Close	 Eject / Surround	 Start Menu	 Smart / List
 Zoom/Mode Rec	 Zoom / Size	 CH+ / Page+	 CH+ / Page+
 AV Auto Rec	 TV/Radio /	 Vol- Tv	 Vol-
 Direct	 D.Menu / Top	 Display/Back	 Display / Media
 C/Erase	 Setup / OPT /	 CH- / Page-	 CH- / Page-





Original	Substituto	Original	Substituto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	100/ENT./AM/F		Guide / EPG / -/--
	0		0
	VCR Plus		Fav / Marker / PC
	Red/B		Red / Netflix / Search
	Green/C		Green / APP / Repeat
	Yellow/D		Yellow / YouTube / Repeat
	Blue/A		Blue / Prime Video / Random
	Power Tv		Shift + Power

Original	Substituto	Original	Substituto
	Replay		Shift + Play /
	Rec Pause		Shift + Pause / Step /
	Rec Stop		Shift + Stop /
	Skip Search		Shift + << /
	I> Slow		Shift + >>I / Preset+
	On Screen/Tamper		Shift + Zoom /
	Function		Shift + D.Menu / Top Menu
	Dubbing		Shift + Setup / OPT / Tools
	P.IN P		Shift + Text /
	Input Tv		Shift + AV / Input / RDS
	Angle		Shift + Info / Angle
	Chapter Mark/Connection		Shift + Smart / List
	CH+ Tv		Shift + CH+ /
	CH- Tv		Shift + CH- /
	DVD		Shift + 2
	HDD		Shift + 7

