






















| Original | Substituto |
|---|---|
|  Standby |  Power |
|  Info |  Info / Angle |
|  Mute |  Mute / Dimmer |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  Zoom |  Zoom / Size |
|  Sleep |  Sleep / Timer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Freeze |  Pause / Step / Freeze |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  DTV/Radio |  TV/Radio / |
|  7 |  7 |
|  8 |  8 |

| Original | Substituto |
|--|--|
|  9 |  9 |
|  FAV / Slow |  Shift + Play / |
|  FAV / Slow |  Fav / Marker / PC |
|  Source |  AV / Input / RDS |
|  0 |  0 |
|  Exit |  Exit / Cancel / Clear |
|  CH.List / Step |  Smart / List |
|  CH.List / Step |  Shift + Pause / Step / |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  Prog- |  CH- / Page- |
|  Prog+ |  CH+ / Page+ |





| Original | Substituto |
|--|--|
|  LCD Menu |  Menu / Home |
|  EPG / DVD |  Guide / EPG / -/-- |
|  EPG / DVD |  D.Menu / Top |
|  Audio Language |  Audio / Lang I/II |
|  Recall / DVD |  Back / Return |
|  Recall / DVD |  Setup / OPT / |
|  TXT / Title |  Text / Goto |
|  TXT / Title |  Shift + Sound / Title |
|  Index / Angle |  Shift + Info / Angle |
|  Size / Goto |  Shift + Text / |
|  Size / Goto |  Shift + Zoom / |
|  Subtitle |  Subtitle / EQ |
|  Mix / Open/Close |  Eject / Surround |
|  Reveal / |  Play / Slow |
|  Hold / Stop |  Stop / Hold |
|  Subpage / A-B |  Shift + Yellow / YouTube / |
|  Red/ << |  Red / Netflix / Search |

| Original | Substituto |
|--|---|
|  Red/ << |  << / Tune- |
|  Green/ >> |  Green / APP / Repeat |
|  Green/ >> |  >> / Tune+ |
|  Yellow/ << |  Yellow / YouTube / Repeat |
|  Yellow/ << |  <<< / Preset- |
|  Blue/ >> |  Blue / Prime Video / Random |
|  Blue/ >> |  >> / Preset+ |
|  Prog |  Shift + TV/Radio / Program |
|  Repeat |  Shift + Green / APP / |
|  Display |  Display / Media |
|  USB/Disc |  Shift + 8 |

