



Original	Substituto
 Power	 Power
 TTX	 Text / Got o
 Fav	 Fav / Marker / PC
 Audi o	 Audi o / Lang I / II
 Mut e	 Mut e / Di mmer
 Pl ay	 Pl ay / Sl ow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 Red / SOS	 Red / Netf lix / Search
 Green / Sous	 Green / APP / Repeat
 Green / Sous	 Subtitle / EQ
 Yel low / Enrec	 Yel low / YouT ube / Repeat
 Bl ue / Ti mer	 Bl ue / Pri me Vi deo / Random
 Bl ue / Ti mer	 Sl eep / Ti mer
 Gui de	 Gui de / EPG / - / -
 Up	 Up

Original	Substituto
 I nf os	 I nf o / Angl e
 Lef t	 Lef t
 OK	 OK
 Ri ght	 Ri ght
 Menu	 Menu / Home
 Down	 Down
 Qui t	 Exi t / Cancel / Cl ear
 Vol +	 Vol +
 Rec	 Rec / Rec Mde
 CH+	 CH+ / Page+
 Vol -	 Vol -
 St op	 St op / Hol d
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4





Original	Substituto	Original	Substituto
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
TVRADIO	TV / Radi o	PROGRAM TV/ RADIO	TV/ Radi o /
0	0	HDMI - SAT 0	0
↵	Back	RETURN BACK	Back / Ret urn

Original	Substituto	Original	Substituto

