


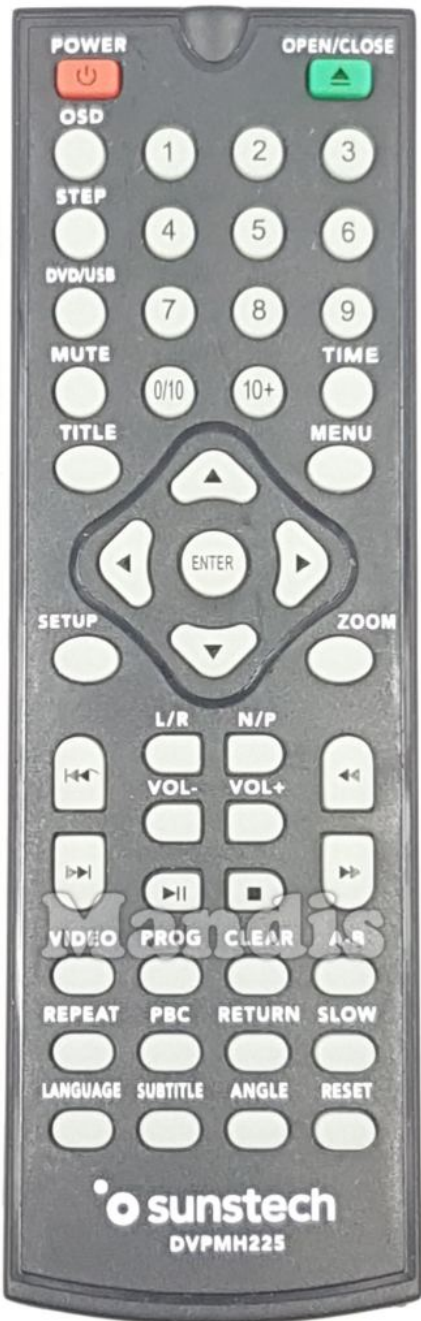

Original	Substituto	Original	Substituto
 Power	 Power	 Time	 Sleep / Timer
 Open/Close	 Eject / Surround	 Title	 Sound / Title
 OSD	 Display / Media	 Up	 Up
 1	 1	 Menu	 Menu / Home
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 Step	 Shift + Pause / Step /	 Right	 Right
 4	 4	 Setup	 Setup / OPT /
 5	 5	 Down	 Down
 6	 6	 Zoom	 Zoom / Size
 DVD/USB	 AV / Input / RDS	 I<<	 I<< / Preset-
 7	 7	 L/R	 Red / Netflix / Search
 8	 8	 N/P	 Blue / Prime Video / Random
 9	 9	 <<	 << / Tune-
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 0/10	 0	 Vol+	 Vol+
 10+	 Guide / EPG / -/--	 >>I	 >>I / Preset+

Original	Substituto	Original	Substituto
 Power	 Mute / Dimmer	 Shift	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 Play	 Pause	 PRESET-	 PRESET+
 TUNE-	 TUNE+	 EQ	 SURROUND
 TITLE	 LANG	 SUBTITLE	 PROGRAM
 SOUND	 AUDIO	 TIMER	 TV RADIO
 FORMAT	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 HOME
 HOME	 ANGLE	 INFO	
 MENU	 OK	 RETURN	
 CLEAR	 EXIT	 BACK	
 CANCEL	 LIST	 CH PAGE	
 VOL+	 SMART	 MEDIA	
 VOL-	 DISPLAY	 TUNER	
 TV	 DVD	 CD - BTB	
 1	 TAPE	 BLUETOOTH	
 2	 USB	 FC	
 3	 HDMI - BAT	 FAV MARKER	
 4	 GUIDE EPG	 SEARCH	
 5	 REPEAT	 REPEAT A-B	
 6	 RANDOM	 RANDOM	
 7	 NETFLIX	 APP	
8	YouTube	Prime Video	
9			
0			





Original	Substituto
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	>> / Tune+
	Shift + 4
	TV/Radio /
	Exit / Cancel / Clear
	Yellow / YouTube / Repeat
	Green / APP / Repeat
	Text / Goto
	Back / Return
	Shift + Play /
	Audio / Lang I/II
	Subtitle / EQ
	Info / Angle
	Shift + Exit / Cancel / Clear

Original	Substituto

