



Original	Substituto	Original	Substituto
 Power	 Power	 Vol+	 Vol+
 Sub-T	 Subtitle / EQ	 FAV	 Fav / Marker / PC
 Lang	 Audio / Lang I / II	 Down / CH-	 Down
 Mute	 Mute / Dimmer	 Tv / Radio	 TV / Radio /
 EPG	 Guide / EPG / - / -	 1	 1
 Goto	 Shift + Goto / Text /	 2	 2
 Page+	 CH+ / Page+	 3	 3
 TTX	 Text / Goto	 Recall	 Back / Return
 Repeat	 Shift + Repeat / APP /	 4	 4
 Page-	 CH- / Page-	 5	 5
 Menu	 Menu / Home	 6	 6
 Up / CH+	 Up	 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear	 7	 7
 Vol-	 Vol-	 8	 8
 Left	 Left	 9	 9
 OK	 OK	 0	 0
 Right	 Right	 <<	 << / Tune-





Original		Substituto		Original	Substituto
	>>		>> / Tune+		
	I<<		I<< / Preset-		
	>>I		>>I / Preset+		
	Play		Play / Slow		
	Pause/Time Shift		Pause / Step / Freeze		
	Stop		Stop / Hold		
	Rec		Rec / Rec Mode		
	Red/PVR		Red / Netflix / Search		
	Green/V-Format		Green / APP / Repeat		
	Yellow/Aspect		Yellow / YouTube / Repeat		
	Blue/Timer		Blue / Prime Video / Random		

