

 

 

 

 

 


 
 

 

 

 

 





 







 



 



 



 



 



 



 











Original	Substituto	Original	Substituto
 Power	 Power	 Options	 Setup / OPT /
 Ambilight	 TV/Radio /	 7	 7
 Sources	 AV / Input / RDS	 Down	 Down
 Search	 Sound / Title	 8	 8
 *	 D.Menu / Top	 Subtitle	 Subtitle / EQ
 TV Guide	 Guide / EPG / -/--	 9	 9
 1	 1	 Back	 Back / Return
 2	 Up	 Tv/Exit	 Exit / Cancel / Clear
 2	 2	 0	 0
 Info	 Info / Angle	 Home	 Menu / Home
 3	 3	 Vol+	 Vol+
 4	 Left	 CH+	 CH+ / Page+
 4	 4	 Mute	 Mute / Dimmer
 OK	 OK	 =	 Display / Media
 5	 5	 Vol-	 Vol-
 Right	 Right	 CH-	 CH- / Page-
 6	 6	 Red	 Red / Netflix / Search



