



Original	Substituto	Original	Substituto
Standby/On	Power	Sleep	Sleep / Timer
Open/Close	Eject / Surround	P.Bass	Setup / OPT /
1	1	Bass/Treble	D.Menu / Top
2	2	Repeat	Green / APP / Repeat
3	3	Random	Blue / Prime Video / Random
Dimmer	Shift + Mute / Dimmer	<</I<< Tuning	<< / Tune-
4	4	<</I<< Tuning	I<< / Preset-
5	5	Preset Up	Up
6	6	Preset Up	Shift + >>I / Preset+
Memory	Rec / Rec Mode	Preset Up	CH+ / Page+
7	7	Tuning >>I/>>	>> / Tune+
8	8	Tuning >>I/>>	>>I / Preset+
9	9	Vol-	Vol-
Clear	Exit / Cancel / Clear	Vol-	Left
0	0	Enter	OK
>10	Guide / EPG / -/--	Vol+	Vol+
Clock/Timer	Shift + Sleep / Timer	Vol+	Right



