



Original	Substituto	Original	Substituto
 Open / Close	 Eject / Surround	 TV / Video	 AV / Input / RDS
 Power	 Power	 Shuffle	 Blue / Prime Video / Random
 1	 1	 Repeat	 Green / APP / Repeat
 2	 2	 Vol +	 Vol+
 3	 3	 Program	 TV/Radio /
 Set Up	 Setup / OPT /	 A-B	 Yellow / YouTube / Repeat
 4	 4	 Vol -	 Vol-
 5	 5	 Audio	 Audio / Lang I/II
 6	 6	 Angle	 Info / Angle
 TV / DVD	 Smart / List	 Subtitle	 Subtitle / EQ
 7	 7	 Time / Text	 Text / Goto
 8	 8	 Time / Text	 Sleep / Timer
 9	 9	 <II Step	 Shift + I<< / Preset-
 Wide Mode	 Picture / Format	 Step II>	 Shift + >>I / Preset+
 Clear	 Exit / Cancel / Clear	 <I Slow	 Shift + << /
 0	 0	 Slow II>	 Shift + >> /
 Enter	 Fav / Marker / PC	 I<< Prev	 I<< / Preset-





Original	Substituto	Original	Substituto
	Next >>		>>  / Preset+
	<< Scan		<< / Tune-
	Scan >>		>> / Tune+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Title		Sound / Title
	DVD Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Display		Display / Media
	Down		Down
	Return		Back / Return







	Original	Substituto	Original	Substituto
	Power			TV Prog-
	1			CH- / Page-
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	-/--			
	0			
	Enter			
	Repeat			
	Vol+			
	TV Prog+			
	Vol-			

