





 





















 







Original	Substituto
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 << / Tune-
	 >> / Tune+
	 Subtitle / EQ
	 Picture / Format
	 D.Menu / Top
	 Fav / Marker / PC
	 Setup / OPT /
	 AV / Input / RDS
	 Menu / Home
	 Up
	 Info / Angle
	 Left
	 OK

Original	Substituto
	 Right
	 Exit / Cancel / Clear
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7



