

Original	Substituto	Original	Substituto
Power	 Power	Down	 Down
Mute	 Mute / Dimmer	Back	 Back / Return
Play	 Play / Slow	Vol+	 Vol+
Pause	 Pause / Step / Freeze	Smart	 Smart / List
Stop	 Stop / Hold	CH+	 CH+ / Page+
Rec	 Rec / Rec Mode	Vol-	 Vol-
<<	 << / Tune-	Butterfly	 Display / Media
>>	 >> / Tune+	CH-	 CH- / Page-
Ambilight	 Picture / Format	1	 1
Options	 Setup / OPT /	2	 2
Pair / Sources	 AV / Input / RDS	3	 3
Menu	 Menu / Home	4	 4
Up	 Up	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
TV Exit	 Exit / Cancel / Clear	9	 9



The image shows a black Mandis remote control with a variety of buttons. At the top, there is a power button (red circle with a power symbol), a DIMMER MUTE button (black circle with a speaker icon and the word 'MUTE'), and a SHIFT button (yellow circle with the word 'SHIFT'). Below these are four function buttons: TV, DVD, SAT, and AUX. The main body of the remote contains numerous buttons for various functions, including play, pause, stop, first, previous, next, last, and a central OK button with directional arrows. There are also buttons for volume, channel, and a numeric keypad. At the bottom, there are buttons for Netflix, App, YouTube, and Prime Video, along with search, repeat, and random buttons.