

Original	Substituto	Original	Substituto
On/Off	 Power	Info	 Info / Angle
Mute	 Mute / Dimmer	Menu Left	 Left
H/V Play	 Play / Slow	OK Enter	 OK
Freeze	 Pause / Step / Freeze	Menu Right	 Right
East	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
Lang./Rewind	 << / Tune-	Menu Down	 Down
LNB F.Forward	 >> / Tune+	Back	 Back / Return
Audio	 Audio / Lang I/II	Volume+	 Vol+
Subt.List	 Subtitle / EQ	TV	 Smart / List
Zoom	 Zoom / Size	CH/Page+	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
TV/SAT	 TV/Radio /	Display	 Display / Media
Sys/Serv	 D.Menu / Top	CH/Page-	 CH- / Page-
Opt?	 Setup / OPT /	1. ?	 1
Text	 Text / Goto	2abc	 2
Menu	 Menu / Home	3def	 3
Menu Up	 Up	4ghi	 4



Original	Substituto		Original	Substituto
5jkl		5		
6mno		6		
7pqrm		7		
8tuv		8		
9wxyz		9		
Guide Pilote		Guide / EPG / -/--		
0/10		0		
FAV Pref.		Fav / Marker / PC		
Red		Red / Netflix / Search		
Green		Green / APP / Repeat		
Yellow		Yellow / YouTube / Repeat		
Blue		Blue / Prime Video / Random		
PWR On/Off	 + 	Shift + Power		
Epg	 + 	Shift + Guide / EPG / -/--		
App	 + 	Shift + Green / APP /		

