

Original	Substituto	Original	Substituto
On/Off	 Power	Chan.Down	 CH- / Page-
Mute	 Mute / Dimmer	1	 1
Menu audio	 Audio / Lang I/II	2	 2
Sleep Timer	 Sleep / Timer	3	 3
Return TV	 TV/Radio /	4	 4
Text	 Text / Goto	5	 5
TV/AV	 AV / Input / RDS	6	 6
Menu	 Menu / Home	7	 7
Menu Up	 Up	8	 8
Camera	 Info / Angle	9	 9
Menu Left	 Left	Guide -/-- 1.	 Guide / EPG / -/--
OK Enter	 OK	0/10	 0
Menu Right	 Right	2.Fav P/C 2.	 Fav / Marker / PC
Menu Down	 Down	Red	 Red / Netflix / Search
Volume+	 Vol+	Green	 Green / APP / Repeat
Chan.Up	 CH+ / Page+	Yellow	 Yellow / YouTube / Repeat
Volume-	 Vol-	Blue	 Blue / Prime Video / Random



Power **DIMMER MUTE** **SHIFT**

TV **DVD** **SAT** **AUX**
 SLOW STEP-FREEZE HOLD REC MODE

Play **Pause** **Stop** **Record**
 TUNE- TUNE+ PRESET- PRESET+

Previous **Next** **Fast Previous** **Fast Next**
 TITLE LANG III EQ SURROUND

SOUND **AUDIO** **SUBTITLE** **Up Arrow**
 FORMAT SIZE TIMER PROGRAM

PICTURE **ZOOM** **SLEEP** **TV RADIO**
 TOP MENU OPT-TOOLS GOTO RDS

D.MENU **SETUP** **TEXT** **AV INPUT**

HOME **ANGLE**
MENU **Info**

OK **Left Arrow** **Right Arrow** **Up Arrow** **Down Arrow**

CLEAR **RETURN**
EXIT **BACK**

CANCEL **LIST** **+**
VOL **SMART** **CH PAGE**
- **MEDIA** **-**
DISPLAY

TV **DVD** **CD-STB**
1 **2** **3**
VIDEO **TAPE** **TUNER**
4 **5** **6**

AUX+HDD **UBB** **BLUETOOTH**
7 **8** **9**
TV **HDMI-SAT** **PC**
GUIDE **0** **FAV MARKER**
EPG

NETFLIX **APP** **YouTube** **Prime Video**

SEARCH **REPEAT** **REPEAT A-B** **RANDOM**

Mandis
 shop
 www.mandis.tv

Original	Substituto		Original	Substituto	
On/Off		Power	Info		Info / Angle
Mute		Mute / Dimmer	Menu Left		Left
Update		Play / Slow	OK Enter		OK
Reveal		Pause / Step / Freeze	Menu Right		Right
Txt Stop		Stop / Hold	Menu Off		Exit / Cancel / Clear
Menu audio		Audio / Lang I/II	Menu Down		Down
Subt.List		Subtitle / EQ	Back		Back / Return
Surround		Eject / Surround	Volume+		Vol+
4.# 16:9		Picture / Format	Browse		Smart / List
Txt Expand		Zoom / Size	Chan.Up		CH+ / Page+
Sleep Timer		Sleep / Timer	Volume-		Vol-
Return TV		TV/Radio /	Display		Display / Media
Menu video		D.Menu / Top	Chan.Down		CH- / Page-
Text		Text / Goto	1		1
TV/AV		AV / Input / RDS	2		2
Menu		Menu / Home	3		3
Menu Up		Up	4		4



Original	Substituto		Original	Substituto
5		5		
6		6		
7		7		
8		8		
9		9		
Guide -/-- 1.		Guide / EPG / -/--		
0/10		0		
2.Fav P/C 2.		Fav / Marker / PC		
Red		Red / Netflix / Search		
Green		Green / APP / Repeat		
Yellow		Yellow / YouTube / Repeat		
Blue		Blue / Prime Video / Random		
Nicam/Mono		+  Shift + Audio / Lang I/II		
Mix Scan		+  Shift + Text /		
Level L		+  Shift + Left		
Level R/Woofer		+  Shift + Right		
3.*		+  Shift + 3		

