

Original	Substituto	Original	Substituto
On/Off	 Power	Top Menu	 D.Menu / Top
Audio Off	 Mute / Dimmer	Setup	 Setup / OPT /
Play	 Play / Slow	Auto/Track	 Text / Goto
Stop	 Stop / Hold	C/CH	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Clear/00:00	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Pbc	 Picture / Format	DVD/TV	 Smart / List
Zoom	 Zoom / Size	Slow Up	 CH+ / Page+
Digest	 Sleep / Timer	Display	 Display / Media
Progr.	 TV/Radio /	Slow Down	 CH- / Page-



Original	Substituto		Original	Substituto
1		1		
2		2		
3		3		
4		4		
5		5		
6		6		
7		7		
8		8		
9		9		
+10		Guide / EPG / -/--		
0		0		
Mark		Fav / Marker / PC		
Repeat/1/All		Green / APP / Repeat		
Rep/A-B		Yellow / YouTube / Repeat		
Lang	 + 	Shift + Audio / Lang I/II		

