

 


 
 

 
 
 
 

 
 





 
 

 
 

 





 


 
 

 
 

 
 


 
 
 
 
 







 

 

 

 




 
 




	Original	Substituto		Original	Substituto
	Power		Power		6
	Tv/TXT		Text		7
	Input		AV		8
	OK		Ok		9
	Up		Up		0
	Down		Down		Back
	Right		Right		FAV
	Left		Left		Menu
	Vol+		Vol +		Exit
	Vol-		Vol -		Nicam/A2
	CH+		Ch +		Display
	CH-		Ch -		Mute
	1		1		Picture
	2		2		Sound
	3		3		Sleep
	4		4		Subtitle
	5		5		EPG
					Shift + Pre Ch
					Menu
					Exit
					Shift + Guide
					Shift + Info
					Mute
					Format
					Dual
					Sleep
					Subt
					Guide





Original	Substituto	Original	Substituto
 CH/List	 Pre Ch		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue/Screen	 Blue		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Record	 Rec		
 >>/Size	 >>		
 <</Hold	 <<		
 Cancel	 Shift + Back		
 Reveal/Rep	 Eject		
 I<</Subpage	 D. Menu		
 >>I/Index	 Info		
 List	 List		

Original	Substituto

