











 







 







 



 







































Original		Substituto		Original		Substituto	
	Power		Power		7		7
	Text		Text / Goto		8		8
	△		Setup / OPT /		9		9
	Help		Zoom / Size		Back		Back / Return
	Rec		Rec / Rec Mode		0		0
	D.Menu / Top		D.Menu / Top		Enter		Fav / Marker / PC
	Stop		Stop / Hold		Vol+		Vol+
	<<		<< / Tune-		Language		Audio / Lang I/II
	Play / Pause		Play / Slow		CH+		CH+ / Page+
	Play / Pause		Pause / Step / Freeze		Vol-		Vol-
	>>		>> / Tune+		Mute		Mute / Dimmer
	1		1		CH-		CH- / Page-
	2		2		Guide		Guide / EPG / -/-
	3		3		Up		Up
	4		4		Info		Info / Angle
	5		5		Left		Left
	6		6		OK		OK















 







 







 



 





































Original		Substituto		Original		Substituto	
	Right		Right				
	Menu		Menu / Home				
	Down		Down				
	Exit		Exit / Cancel / Clear				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Digital TV		Smart / List				
	Movie		Picture / Format				
	Radio		TV/Radio /				
	Media		Display / Media				































Original		Substituto		Original		Substituto	
	Power		Power		7		7
	Text		Text / Goto		8		8
	△		Setup / OPT /		9		9
	Help		Zoom / Size		Back		Back / Return
	Rec		Rec / Rec Mode		0		0
	D.Menu / Top		D.Menu / Top		Enter		Fav / Marker / PC
	Stop		Stop / Hold		Vol+		Vol+
	<<		<< / Tune-		Language		Audio / Lang I/II
	Play / Pause		Play / Slow		CH+		CH+ / Page+
	Play / Pause		Pause / Step / Freeze		Vol-		Vol-
	>>		>> / Tune+		Mute		Mute / Dimmer
	1		1		CH-		CH- / Page-
	2		2		Guide		Guide / EPG / -/--
	3		3		Up		Up
	4		4		Info		Info / Angle
	5		5		Left		Left
	6		6		OK		OK





Original	Substituto
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Digital TV	 Smart / List
 Movie	 Picture / Format
 Radio	 TV/Radio /
 Media	 Display / Media

Original	Substituto

