









 




 


























 



 


 

 


 




 

 









Original	Substituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Fav / Marker / PC
 Recall	 Back / Return
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 EPG	 Guide / EPG / -/--

Original	Substituto
 Exit	 Exit / Cancel / Clear
 Up/FAV+	 Up
 Down/FAV-	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Display	 Display / Media
 Open/Close/Smart	 Eject / Surround
 VOL+	 Vol+
 Vol-	 Vol-
 USB/Media	 Shift + Display / Media
 Play/Pause/Text	 Play / Slow
 Stop/Index	 Stop / Hold
 Rec/Media2	 Rec / Rec Mode
 I<</Hold	 I<< / Preset-





Original	Substituto
 >>/Size	 >> / Preset+
 <</S.Page	 << / Tune-
 >>/Reveal	 >> / Tune+
 Red/Goto	 Red / Netflix / Search
 Green/Slow	 Green / APP / Repeat
 Yellow/REPT	 Yellow / YouTube / Repeat
 Blue/A-B	 Blue / Prime Video / Random
 D.Setup	 Setup / OPT /
 D.Menu	 D.Menu / Top
 D.Title	 Smart / List
 D.Prog	 Text / Goto
 I-II/Nicam	 Shift + Picture / Format
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 P.Size	 Zoom / Size
 Audio	 Audio / Lang I/II
 Sleep	 Sleep / Timer

Original	Substituto
 S.Title	 Pause / Step / Freeze
 Tv/Radio	 TV/Radio /

