




 




 
 










 














 

 

 

 





 

Original	Substituto	Original	Substituto
	Source		AV / Input / RDS
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	PRE-CH		Back / Return
	HDMI		Shift + 0
	YPbPr		Setup / OPT /
	Video		Shift + 4

Original	Substituto	Original	Substituto
	PC		Shift + Fav / Marker / PC
	CH+ / Page+		CH+ / Page+
	Mute / Dimmer		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Zoom / Size		Zoom / Size
	CH- / Page-		CH- / Page-
	Audio / Lang I/II		Audio / Lang I/II
	Sound / Title		Sound / Title
	Picture / Format		Picture / Format
	Sleep / Timer		Sleep / Timer
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu / Home		Menu / Home
	Exit / Cancel / Clear		Exit / Cancel / Clear





Original	Substituto
	 Down
	 Info / Angle
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Text / Goto
	 Shift + Text /
	 Shift + Zoom /
	 >> / Tune+
	 Play / Slow
	 Subtitle / EQ
	 Stop / Hold
	 << / Tune-
	 Fav / Marker / PC
	 Smart / List
	 Shift + Audio / Lang I/II

Original	Substituto
	 Pause / Step / Freeze

