


 

















Original	Substituto	Original	Substituto
 Power	 Power	 9	 9
 Video	 Shift + 4	 EPG	 Guide / EPG / -/-
 Video	 << / Tune-	 0	 0
 Scart	 Setup / OPT /	 PRE PR	 Back / Return
 Scart	 >> / Tune+	 Source	 AV / Input / RDS
 PC	 Fav / Marker / PC	 Aspect	 Shift + Picture / Format
 PC	 I<< / Preset-	 Dual	 Audio / Lang I/II
 TV	 TV/Radio /	 Sleep	 Sleep / Timer
 TV	 >>I / Preset+	 Picture	 Picture / Format
 1	 1	 PR List	 Smart / List
 2	 2	 Sound	 Sound / Title
 3	 3	 Vol+	 Vol+
 4	 4	 Mute	 Mute / Dimmer
 5	 5	 P+	 CH+ / Page+
 6	 6	 Vol-	 Vol-
 7	 7	 Display	 Display / Media
 8	 8	 P-	 CH- / Page-





Original	Substituto
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Teletext	 Text / Goto
 Mix	 Shift + Text /
 Size	 Zoom / Size
 Subpage	 Eject / Surround
 Index	 Info / Angle
 Subtitle	 Subtitle / EQ

Original	Substituto
 Hold	 Stop / Hold
 Reveal	 D.Menu / Top

