




 



 
 


 








 










 















 
 

 
 
 
 












Original	Substituto	Original	Substituto
 Power	 Power	 Recall	 Back / Return
 Mute	 Mute / Dimmer	 Red	 Red / Netflix / Search
 P.Mode	 Picture / Format	 Green	 Green / APP / Repeat
 S.Mode	 Sound / Title	 Yellow	 Yellow / YouTube / Repeat
 Sleep	 Sleep / Timer	 Blue	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Source	 AV / Input / RDS
 3	 3	 Left	 Left
 4	 4	 OK / Enter	 OK
 5	 5	 Right	 Right
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Down	 Down
 8	 8	 Info	 Info / Angle
 9	 9	 CH+	 CH+ / Page+
 Freeze	 Pause / Step / Freeze	 Home	 Shift + Menu /
 0	 0	 Vol+	 Vol+





	Original	Substituto		Original	Substituto
	CH-	 CH- / Page-		Zoom-	 Shift + Down
	Mouse	 Smart / List		Zoom+	 Shift + Up
	Vol-	 Vol-		EPG	 Guide / EPG / -/-
	<< / Text	 << / Tune-		DTV / Radio	 TV/Radio /
	<< / Text	 Text / Goto		Rec	 Rec / Rec Mode
	>> / Hold	 Shift + Stop /		Subtitle	 Subtitle / EQ
	>> / Hold	 >> / Tune+			
	I<< / Mix	 I<< / Preset-			
	I<< / Mix	 Shift + Text /			
	>>I / Reveal	 >>I / Preset+			
	Play/Pause / Index	 Play / Slow			
	Stop / Size	 Stop / Hold			
	Stop / Size	 Zoom / Size			
	FAV	 Fav / Marker / PC			
	Aspect	 Shift + Picture / Format			
	File	 Display / Media			
	Delete	 Eject / Surround			

