














 






 









 



 



 





 

 

 

 

 

 

 




 

Original	Substituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 PR.List	 Smart / List
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Pic.Mode	 Picture / Format
 S.Mode	 Sound / Title

Original	Substituto
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer
 Rec	 Rec / Rec Mode
 Rec List	 Shift + Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Substituto
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Fav / Marker / PC
	 TV/Radio /
	 Audio / Lang I/II
	 Subtitle / EQ
	 Guide / EPG / -/--
	 Setup / OPT /
	 Display / Media
	 Info / Angle
	 Text / Goto
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-

Original	Substituto
	 >> / Tune+

