

 









 

 



















 





 































Original	Substituto	Original	Substituto
	Subtitle		Subtitle / EQ
	Format		Picture / Format
	Red / Timer		Sleep / Timer
	Up / CH+		Up
	Down / CH-		Down
	Red / Timer		Red / Netflix / Search
	Right / Vol+		Right
	Left / Vol-		Left
	Page Up		CH+ / Page+
	Right / Vol+		Vol+
	Left / Vol-		Vol-
	OK		OK
	Back		Back / Return
	TV/R		TV/Radio /
	Info		Info / Angle
	EPG		Guide / EPG / -/--
	Fav		Fav / Marker / PC
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Page down		CH- / Page-
	Blue		Blue / Prime Video / Random
	Prev		I<< / Preset-
	Next		>>I / Preset+
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	FRW		<< / Tune-
	Play		Play / Slow
	FFW		>> / Tune+
	7		7
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	1		1





Original	Substituto	Original	Substituto
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
Power	Power		
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
List	Smart / List		
Lang	Audio / Lang I/II		
TXT	Text / Goto		

