




 
 
 


 

 
 

 

 


 

 
 

 


 

 




Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	Timer		AV
	Pg Dn		Shift + Ch -
	Pg Up		Shift + Ch +
	<<		<<
	>>		>>
	I<<		I<<



 

 
 

 

 
 
 
 
 






 








 


 

 


 




	Original	Substituto	Original	Substituto
	 >>I	 >>I		
	 CH +	 Ch +		
	 CH -	 Ch -		
	 Play	 Play		
	 Pause	 Pause		
	 Stop	 Stop		
	 Audio	 Dual		
	 PAL / NTSC	 3D		
	 Sleep	 Sleep		
	 TV / Radio	 TV/R		
	 Red	 Red		
	 Aspect	 Format		
	 Green	 Green		
	 Yellow	 Yellow		
	 Blue	 Blue		





Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	Timer		AV
	Pg Dn		Shift + Ch -
	Pg Up		Shift + Ch +
	<<		<<
	>>		>>
	I<<		I<<


 

 
 

 





 





Original		Substituto		Original	Substituto
	>>I		>>I		
	CH +		Ch +		
	CH -		Ch -		
	Play		Play		
	Pause		Pause		
	Stop		Stop		
	Audio		Dual		
	PAL / NTSC		3D		
	Sleep		Sleep		
	TV / Radio		TV/R		
	Red		Red		
	Aspect		Format		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		





Original	Substituto	Original	Substituto
Power		Power	
Mute		Mute	
FAV		Pre Ch	
Subtitle		Subt	
Info		Info	
TTX		Text	
List		List	
Recall		Back	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	

Original	Substituto	Original	Substituto
0		0	
Menu		Menu	
Exit		Exit	
EPG		Guide	
Swap		Media	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
OK		Ok	
Vol+		Vol +	
Vol-		Vol -	
Pg Up		Shift + Up	
PG Dn		Shift + Down	
CH+		Ch +	
CH-		Ch -	
>>		>>	





Original	Substituto	Original	Substituto
<<		<<	
>>		>>	
I<<		I<<	
Play		Play	
Pause/Timeshift		Pause	
Stop		Stop	
Rec		Rec	
Audio		Dual	
M/P		Smart	
Tv/Radio		TV/R	
A-B		Options	
Red/Zoom		Red	
Green/Aspect		Green	
Yellow/V-Formet		Yellow	
Blue/Timer		Blue	

