



 

 

 

 


 
 
 


 
 
 

 

 
 

 



 
 


 



 

 

 

 

 












 











Original	Substituto	Original	Substituto
	Hold		Options
	Power		Power
	Sleep		Sleep
	TV		TV/R
	AV		AV
	Scart		Smart
	PC		Media
	Display		Info
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Enter		Ok
	Menu		Menu
	TTX/MIX		Text
	Wide		Format
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	OK		Play
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Index		Back





	Original	Substituto	
SUBTITLE	Subtitle	AD SUBT	Subt
SIZE	Size	DISC NAV LIST	List
SUBPAGE	Subpage	SOUND DUAL	Dual
REVEAL	Reveal	CLEAR EXIT	Exit
	Red	A	Red
	Green	B	Green
	Yellow	C	Yellow
	Blue	D	Blue
MPX	MPX	SHIFT + HOME SMART	Shift + Smart

	Original	Substituto

