




 




 
 










Original	Substituto	Original	Substituto
 POWER	 Power	 INFO	 Info
 MUTE	 Mute	 TV/RADIO	 TV/R
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 LCD MENU	 Menu
 4	 4	 DVB MENU	 D. Menu
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 Right	 Right
 8	 8	 Left	 Left
 9	 9	 Enter	 Ok
 0	 0	 INPUT	 AV
 -/-	 Guide	 PMODE	 Shift + Format
 Recall	 Back	 SMODE	 Dual
 VOL+	 Vol +	 SLEEP	 Sleep
 VOL-	 Vol -	 LIST	 List
 NICAM	 Smart	 FAV	 Pre Ch





Original	Substituto	Original	Substituto
 PAGE-	 <<		
 PAGE+	 >>		
 TEXT	 Text		
 HOLD	 Options		
 EXIT	 Exit		
 EPG	 Shift + Guide		
 INDEX	 3D		
 SUBTITLE	 Subt		
 SIZE	 Format		
 REVEAL	 Media		
 RED	 Red		
 GREEN/AUDIO	 Green		
 YELLOW/PAUSE	 Yellow		
 BLUE	 Blue		

