



Original	Substituto	Original	Substituto
	Power		Power
	Dtv/Vcr		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	<<		<< / Tune-
	Up		Up
	Ch+		Ch+ / Page+
	Green		Green / APP / Repeat
	>>		>> / Tune+
	Left		Left
	Vol-		Vol-
	Ok		OK
	Right		Right
	Vol+		Vol+
	Yellow		Yellow / YouTube / Repeat
	Down		Down
	Ch-		Ch- / Page-
	Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Pause		Pause / Step / Freeze
	Favorite		Fav / Marker / PC
	Recall		Back / Return
	Lang		Lang
	Shift +		Shift + Audio / Lang I/II





Original	Substituto	Original	Substituto
INFO	Info	ANGLE INFO	Info / Angle
EPG	Epg	GUIDE EPG	Guide / EPG / -/--
TV/RADIO	Tv/Radio	PROGRAM TV/RADIO	TV/Radio /
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
TTX	TTX	GOTO TEXT	Text / Goto
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ

