 












 
 


 
 
 

 


 
 
 

 



 
 







 



 
 
 
 


 

 


 

 













Original	Substituto	Original	Substituto
 Power	 Power	 Play/<>/Direction /Preset	 Play
 Vol-	 Vol -	 Tuning	 >>
 Vol+	 Vol +	 Down/ <</>>	 <<
 1	 1	 Karaoke	 Smart
 2	 2	 T-Bass	 Dual
 3	 3	 Tape Deck 1/2	 Red
 4	 4	 Tuner/Band	 Media
 5	 5	 Video/AUX	 Green
 6	 6	 CD	 Yellow
 7	 7	 MD	 Blue
 8	 8	 GEQ	 Options
 9	 9	 Sleep	 Sleep
 0	 0	 Clock	 Shift + AV
 +10	 Guide	 Mono(MD/Tuner)	 TV/R
 Open/Close	 Eject	 Edit/Check	 Exit
 Stop/Clear	 Stop	 PRGM	 Menu
 Pause/Set	 Pause	 Random/Repeat	 Text





Original		Substituto		Original		Substituto	
	Timer		Subt				
	Disc Direct Play 1		AV				
	Disc Direct Play 2		Format				
	Disc Direct Play 3		3D				

