


 



















 

















 



 

 









 














Original	Substituto	Original	Substituto
 Power	 Power	 0	 0
 Volume Up	 Vol +	 CD	 Yellow
 Volume Down	 Vol -	 +10	 Guide
 Sleep	 Sleep	 Tape	 Blue
 Timer Standby	 Shift + Power	 Video1/DAT	 Smart
 Band	 Green	 Video 2/AUX	 Media
 Mono Tuner	 TV/R	 DSP	 3D
 Mode Display	 Info	 PRGM/Test	 Menu
 1	 1	 GEQ	 Back
 2	 2	 Manual/Mode	 Pre Ch
 3	 3	 Mute	 Mute
 4	 4	 Volume Select	 Dual
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 Right	 Right
 8	 8	 Left	 Left
 9	 9	 Direct	 Options








 

 





 

 

 

 

 

 








 

 


 

 

 

 
Original	Substituto	Original	Substituto
 Power	 Power	 3	 3
 Volume Up	 Vol +	 4	 4
 Volume Down	 Vol -	 5	 5
 Mute	 Mute	 6	 6
 Band	 Green	 7	 7
 CD	 Yellow	 8	 8
 Tape	 Blue	 9	 9
 Video1/DAT	 Smart	 0	 0
 Video2/AUX	 Media	 +10	 Guide
 Repeat	 Text	 PRGM CD	 Menu
 Random	 AV	 Play/Pause	 Play
 Disc Skip	 Info	 Stop/Clear	 Stop
 Disc Direct Play 1	 Shift + 1	 Search/Check	 >>
 Disc Direct Play 2	 Shift + 2	  <<	  <<
 Disc Direct Play 3	 Shift + 3	 Edit AI	 Format
 1	 1	 Edit PRGM	 3D
 2	 2	 <> Deck 1	 Pause







Original	Substituto	Original	Substituto
 Power	 Power	 9	 9
 Volume Up	 Vol +	 0	 0
 Volume Down	 Vol -	 +10	 Guide
 Mute	 Mute	 PRGM DAT	 Menu
 Band	 Green	 <> Deck 2	 Play
 CD	 Yellow	 Stop Deck 2	 Stop
 Tape	 Blue	 >> Deck 2	 >>
 Video1/DAT	 Smart	 << Deck 2	 <<
 Video2/AUX	 Media	 Rec/Rec Mute	 Rec
 1	 1	 Pause	 Pause
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		

Original	Substituto	Original	Substituto
 9	 9	 9	 9
 0	 0	 0	 0
 +10	 Guide	 +10	 Guide
 PRGM DAT	 Menu	 PRGM DAT	 Menu
 <> Deck 2	 Play	 <> Deck 2	 Play
 Stop Deck 2	 Stop	 Stop Deck 2	 Stop
 >> Deck 2	 >>	 >> Deck 2	 >>
 << Deck 2	 <<	 << Deck 2	 <<
 Rec/Rec Mute	 Rec	 Rec/Rec Mute	 Rec
 Pause	 Pause	 Pause	 Pause

