 















 

 




Original	Substituto	Original	Substituto
 POWER	 Power	 9 wxyz	 9
 ←○	 Shift + Smart / List	 TV	 TV/Radio /
 **/Ö	 Shift + Display / Media	 0	 0
 **²/♀	 Shift + Red / Netflix /	 ↔	 Shift + Back / Return
 SOURCE	 AV / Input / RDS	 TV GUIDE	 Guide / EPG / -/-
 PRESETS	 Smart / List	 [≡]	 Text / Goto
 ≡≡≡	 Setup / OPT /	 MENU	 Menu / Home
 ♪/☺/■	 Display / Media	 Q.MENU	 D.Menu / Top
 SLEEP	 Sleep / Timer	 UP	 Up
 1 . /@	 1	 LEFT	 Left
 2 abc	 2	 OK	 OK
 3 def	 3	 RIGHT	 Right
 4 ghi	 4	 DOWN	 Down
 5 jkl	 5	 BACK	 Back / Return
 6 mno	 6	 →◻←	 Picture / Format
 7 pqrs	 7	 EXIT	 Exit / Cancel / Clear
 8 tuv	 8	 *FAV	 Fav / Marker / PC





Original	Substituto
VOL+	Vol+
MUTE	Mute / Dimmer
P+	CH+ / Page+
VOL-	Vol-
INFO	Info / Angle
P-	CH- / Page-
REC	Rec / Rec Mode
PLAY	Play / Slow
PAUSE	Pause / Step / Freeze
STOP	Stop / Hold
LANG.	Audio / Lang I/II
<<<	<<< / Tune-
>>>	>>> / Tune+
[≡]...	Sound / Title
RED	Red / Netflix / Search
GREEN	Green / APP / Repeat
YELLOW	Yellow / YouTube / Repeat

Original	Substituto
BLUE	Blue / Prime Video / Random

