



| Original | Substituto | Original | Substituto |
|---|--|--|--|
|  Power |  Power |  Subtitle |  Subtitle / EQ |
|  Eject |  Eject / Surround |  Zoom/Size |  Zoom / Size |
|  Tv/Radio |  TV/Radio / |  Aspect |  Shift + Picture / Format |
|  Red/Goto |  Red / Netflix / Search |  Subpage |  Shift + Subtitle / EQ |
|  Red/Goto |  Shift + Text / |  Media |  Shift + Display / Media |
|  Green/Angle |  Info / Angle |  Play |  Play / Slow |
|  Green/Angle |  Green / APP / Repeat |  Pause |  Pause / Step / Freeze |
|  Yellow/Repeat |  Shift + Green / APP / |  << |  << / Tune- |
|  Yellow/Repeat |  Yellow / YouTube / Repeat |  >> |  >> / Tune+ |
|  Blue/A-B |  Shift + Blue / Prime |  Rec |  Rec / Rec Mode |
|  Blue/A-B |  Blue / Prime Video / Random |  D.Setup |  Setup / OPT / |
|  FAV |  Fav / Marker / PC |  Stop |  Stop / Hold |
|  Text |  Text / Goto |  I<< |  I<< / Preset- |
|  Freeze/Hold |  Shift + Stop / |  I>> |  I>> / Preset+ |
|  Freeze/Hold |  Shift + Pause / Step / |  I>> |  Smart / List |
|  EPG |  Guide / EPG / -/-- |  Menu |  Menu / Home |
|  D.Menu |  D.Menu / Top |  Lang/Audio |  Audio / Lang I/II |

| Original | Substituto | Original | Substituto |
|--|--|--|---|
|  Subtitle |  Subtitle / EQ |  TV |  DIMMER MUTE |
|  Zoom/Size |  Zoom / Size |  DVD |  SHIFT |
|  Aspect |  Shift + Picture / Format |  SAT |  AUX |
|  Subpage |  Shift + Subtitle / EQ |  SLOW |  STEP-FREEZE |
|  Media |  Shift + Display / Media |  TUNE+ |  HOLD |
|  Play |  Play / Slow |  PRESET- |  REC MODE |
|  Pause |  Pause / Step / Freeze |  TUNE- |  PRESET+ |
|  << |  << / Tune- |  TITLE |  LANG I/II |
|  >> |  >> / Tune+ |  EQ |  SURROUND |
|  Rec |  Rec / Rec Mode |  SUBTITLE |  SOUND |
|  D.Setup |  Setup / OPT / |  SIZE |  AUDIO |
|  Stop |  Stop / Hold |  TIMER |  SUBTITLE |
|  I<< |  I<< / Preset- |  PROGRAM |  SLEEP |
|  I>> |  I>> / Preset+ |  TV RADIO |  TV RADIO |
|  I>> |  Smart / List |  RDS |  AV INPUT |
|  Menu |  Menu / Home |  D.MENU |  SETUP |
|  Lang/Audio |  Audio / Lang I/II |  TEXT |  GOTO |





| Original | Substituto |
|----------|-----------------------|
| | Up |
| | Left |
| | OK |
| | Right |
| | Sleep / Timer |
| | Down |
| | Shift + Sound / Title |
| | Exit / Cancel / Clear |
| | Vol+ |
| | Mute / Dimmer |
| | CH+ / Page+ |
| | Vol- |
| | Display / Media |
| | CH- / Page- |
| | 1 |
| | 2 |
| | 3 |

| Original | Substituto |
|----------|----------------------------|
| | 4 |
| | 5 |
| | 6 |
| | 7 |
| | 8 |
| | 9 |
| | Shift + Guide / EPG / -/-- |
| | 0 |
| | Back / Return |
| | AV / Input / RDS |
| | Picture / Format |
| | Sound / Title |
| | |
| | |
| | |
| | |
| | |
| | |

