

 
 





 

 


 



 



 




 








 
 



 






 





 





 
 









 



 


Original	Substituto	Original	Substituto
 Standby	 Power	 Display	 Info
 Mute	 Mute	 TV / Radio	 TV/R
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 FAV	 Pre Ch
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 Rec List	 List	 Rec	 Rec
 Recall	 Back	 Timeshift	 Media
 Auto	 Smart	 CH+	 Ch +
 Subtitle	 Subt	 CH-	 Ch -
 Audio	 Dual	 Source	 AV





Original	Substituto
 PMode	 Shift + Format
 SMode	 Shift + Dual
 Sleep	 Sleep
 Text	 Text
 Hold	 Shift + Stop
 Reveal	 3D
 Subpage	 Shift + Subt
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 Index	 D. Menu
 Size	 Format
 <<<	 <<<
 >>>	 >>>
 <<<	 <<<
 >>>	 >>>
 Red	 A

Original	Substituto
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

