







 


 

 


 









 
 
 


 

 





 








Original	Substituto	Original	Substituto
 Power	 Power	 Up / CH+	 Ch +
 Mute	 Mute	 Down / CH-	 Down
 1	 1	 Down / CH-	 Ch -
 2	 2	 Right / Vol+	 Right
 3	 3	 Right / Vol+	 Vol +
 4	 4	 Left / Vol-	 Left
 5	 5	 Left / Vol-	 Vol -
 6	 6	 [≡i]	 Info
 7	 7	 Mix	 Shift + Text
 8	 8	 Brightness	 Shift + 1
 9	 9	 Contrast	 Shift + 2
 0	 0	 Color	 Shift + 3
 AV	 AV	 Menu	 Menu
 -/--	 GUIDE	 Red	 Red
 TV TX	 Text	 Green	 Green
 OK	 Ok	 Yellow	 Yellow
 Up / CH+	 Up	 Blue	 Blue



