



| Original | Substituto | Original | Substituto |
|----------|----------------|----------|-----------------------------|
| | POWER | | Power |
| | INFO | | Info / Angle |
| | HDMI CONTROL | | Smart / List |
| | SLEEP | | Sleep / Timer |
| | SCREEN | | Picture / Format |
| | SOURCE | | AV / Input / RDS |
| | PRESETS | | Setup / OPT / |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | ZOOM/RED/▲ | | Zoom / Size |
| | ZOOM/RED/▲ | | Shift + CH+ / |
| | ZOOM/RED/▲ | | Red / Netflix / Search |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | REPEAT/GREEN/▼ | | Shift + CH- / Page- |
| | REPEAT/GREEN/▼ | | Green / APP / Repeat |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | ROOT/YELLOW | | Yellow / YouTube / Repeat |
| | RETURN | | Back / Return |
| | 0 | | 0 |
| | MENU | | Menu / Home |
| | TITLE/BBLUE | | Sound / Title |
| | TITLE/BBLUE | | Blue / Prime Video / Random |
| | UP | | Up |
| | LEFT | | Left |
| | OK/SELECT | | OK |
| | RIGHT | | Right |
| | DOWN | | Down |
| | P+ | | CH+ / Page+ |
| | P- | | CH- / Page- |





| Original | Substituto |
|----------|--|
| | V- VOL - Vol- |
| | V+ VOL + Vol+ |
| | PC FAV MARKER Fav / Marker / PC |
| | LANG I/II Audio / Lang I/II |
| | EQ SUBTITLE Subtitle / EQ |
| | DIMMER MUTE Mute / Dimmer |
| | SHIFT + RETURN BACK Shift + Back / Return |
| | GUIDE EPG Guide / EPG / -/-- |
| | TOP MENU D.MENU D.Menu / Top |
| | GOTO TEXT Text / Goto |
| | CLEAR EXIT CANCEL Exit / Cancel / Clear |
| | MEDIA DISPLAY Display / Media |
| | SHIFT + ANGLE INFO Shift + Info / Angle |
| | SHIFT + NETFLIX SEARCH Shift + Red / Netflix / |
| | REC MODE Rec / Rec Mode |
| | HOLD Stop / Hold |
| | SLOW Play / Slow |

| Original | Substituto |
|--------------|--|
| | STEP - FREEZE Pause / Step / Freeze |
| << button"/> | TUNE- << / Tune- |
| >> button"/> | TUNE+ >> / Tune+ |
| | PRESET- I<< / Preset- |
| | PRESET+ >>I / Preset+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

