












 



 














 


 


 



 





 

 


 
 



 








Original	Substituto	Original	Substituto
 Standby	 Power	 Up	 Up
 Mute	 Mute	 Down	 Down
 P/N	 Smart	 Right	 Right
 Open/Close	 Eject	 Left	 Left
 <<	 <<	 OK	 Ok
 >>	 >>	 Vol+	 Vol +
 Play	 Play	 Vol-	 Vol -
 Pause	 Pause	 1	 1
 Stop	 Stop	 2	 2
 I<<	 I<<	 3	 3
 >>I	 >>I	 4	 4
 Setup	 Options	 5	 5
 Source	 AV	 6	 6
 Info	 Info	 7	 7
 Return/Exit	 Back	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0





Original	Substituto	Original	Substituto
 Slow	 Media		
 Program	 Sleep		
 Title/TTX	 Text		
 Audio	 Dual		
 Subtitle	 Subt		
 Red/Repeat	 Red		
 Green/A-B	 Green		
 Yellow/Menu	 Yellow		
 Blue/Angle	 Blue		
 Goto	 Guide		
 Favorite	 Pre Ch		
 Tv/Radio	 TV/R		
 Rec	 Rec		

