



 



 

 
 

 
 

 

 

 

 














 







Original	Substituto
 Power	 Power
 i	 DISPLAY INFO
 TV / Rad	 SEARCH TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 FAV PRE-CH
 Guide	 GUIDE
 V+	 + VOL
 V-	 - VOL

Original	Substituto
 Mute	 MUTE
 P+	 + CH
 P-	 - CH
 BEIN	 HOME SMART
 Back	 RETURN BACK
 Exit	 CLEAR EXIT
 Up	
 Left	
 OK	
 Right	
 Down	
 Red / Lang	 A
 Green / ..	 B
 Yellow	 C
 Blue	 D

