













































 

 
 
 

 
 
 
 
 

 

 




 






Original	Substituto
 POWER	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 MUTE	 Mute / Dimmer
 0	 0
 TEXT	 Text / Goto
 GUIDE	 Guide / EPG / -/--
 INFO	 Info / Angle
 UP	 Up
 FAV	 Fav / Marker / PC

Original	Substituto
 LEFT	 Left
 OK	 OK
 RIGHT	 Right
 LAST	 Exit / Cancel / Clear
 DOWN	 Down
 Back	 Back / Return
 Menu	 Menu / Home
 RED / MOSAIC	 Red / Netflix / Search
 GREEN / SLEEP	 Shift + Sleep / Timer
 GREEN / SLEEP	 Green / APP / Repeat
 YELLOW /	 Yellow / YouTube / Repeat
 YELLOW /	 Audio / Lang I/II
 BLUE / LIST	 Smart / List
 BLUE / LIST	 Blue / Prime Video / Random
 VOL+	 Vol+
 PAGE UP	 Shift + CH+ /
 CH+	 CH+ / Page+





	Original	Substituto	Original	Substituto
	VOL-	Vol-		ZOOM
	PAGE DOWN	Shift + CH- /		TV/Radio
	CH-	CH- / Page-		
	REW	<< / Tune-		
	PLAY / PAUSE	Play / Slow		
	PLAY / PAUSE	Shift + Pause / Step /		
	STOP	Stop / Hold		
	FWD	>> / Tune+		
	REC	Rec / Rec Mode		
	OPTION	Setup / OPT /		
	MEDIA	Display / Media		
	TIME SHIFT	Eject / Surround		
	Pause	Pause / Step / Freeze		
	PIP	AV / Input / RDS		
	SWAP	Shift + AV / Input / RDS		
	TIMER	Sleep / Timer		
	Video FORMAT	Picture / Format		

