




































 
 








Original	Substituto
 POWER	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 MUTE	 Mute / Dimmer
 0	 0
 TEXT	 Text / Goto
 GUIDE	 Guide / EPG / -/--
 INFO	 Info / Angle
 UP	 Up
 FAV	 Fav / Marker / PC

Original	Substituto
 LEFT	 Left
 OK	 OK
 RIGHT	 Right
 LAST	 Exit / Cancel / Clear
 DOWN	 Down
 Back	 Back / Return
 Menu	 Menu / Home
 RED / MOSAIC	 Red / Netflix / Search
 GREEN / SLEEP	 Shift + Sleep / Timer
 GREEN / SLEEP	 Green / APP / Repeat
 YELLOW /	 Yellow / YouTube / Repeat
 YELLOW /	 Audio / Lang I/II
 BLUE / LIST	 Smart / List
 BLUE / LIST	 Blue / Prime Video / Random
 VOL+	 Vol+
 PAGE UP	 Shift + CH+ /
 CH+	 CH+ / Page+





Original	Substituto	Original	Substituto
 VOL-	 Vol-	 ZOOM	 Zoom / Size
 PAGE DOWN	 Shift + CH- /	 TV/Radio	 D.Menu / Top
 CH-	 CH- / Page-		
 REW	 << / Tune-		
 PLAY / PAUSE	 Play / Slow		
 PLAY / PAUSE	 Shift + Pause / Step /		
 STOP	 Stop / Hold		
 FWD	 >> / Tune+		
 REC	 Rec / Rec Mode		
 OPTION	 Setup / OPT /		
 MEDIA	 Display / Media		
 TIME SHIFT	 Eject / Surround		
 Pause	 Pause / Step / Freeze		
 PIP	 AV / Input / RDS		
 SWAP	 Shift + AV / Input / RDS		
 TIMER	 Sleep / Timer		
 Video FORMAT	 Picture / Format		

Original	Substituto
 ZOOM	 Zoom / Size
 TV/Radio	 D.Menu / Top

