



Original	Substituto	Original	Substituto
Modo de espera	+ Shift + Sleep / Timer	Borrar	+ Shift + Back / Return
Ecuilizador	+ Shift + Audio / Lang I/II	0/10	0
Surround	+ Shift + Eject / Surround	10+	Guide / EPG / -/-
Abrir/Cerrar	Eject / Surround	Titulo	Text / Goto
Audio	Audio / Lang I/II	Up	Up
1	1	Menu	Menu / Home
2	2	Left	Left
3	3	OK	OK
Angulo	+ Shift + Picture / Format	Right	Right
4	4	Programa	TV/Radio /
5	5	Down	Down
6	6	Pantalla	Picture / Format
Subtitulo	Subtitle / EQ	PAL/NTSC	Sound / Title
7	7	Configuracion	Setup / OPT /
8	8	Extracto	+ Shift + TV/Radio / Program
9	9	Vol+	Vol+
Busqueda	Red / Netflix / Search	Silencio	Mute / Dimmer

Original	Substituto	Original	Substituto
Modo de espera	+ Shift + Sleep / Timer	Borrar	+ Shift + Back / Return
Ecuilizador	+ Shift + Audio / Lang I/II	0/10	0
Surround	+ Shift + Eject / Surround	10+	Guide / EPG / -/-
Abrir/Cerrar	Eject / Surround	Titulo	Text / Goto
Audio	Audio / Lang I/II	Up	Up
1	1	Menu	Menu / Home
2	2	Left	Left
3	3	OK	OK
Angulo	+ Shift + Picture / Format	Right	Right
4	4	Programa	TV/Radio /
5	5	Down	Down
6	6	Pantalla	Picture / Format
Subtitulo	Subtitle / EQ	PAL/NTSC	Sound / Title
7	7	Configuracion	Setup / OPT /
8	8	Extracto	+ Shift + TV/Radio / Program
9	9	Vol+	Vol+
Busqueda	Red / Netflix / Search	Silencio	Mute / Dimmer





Original	Substituto	Original	Substituto
MARCHADOR	Marcador	LIST SMART	Smart / List
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
VOL-	Vol-	VOL	Vol-
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
REPETICIÓN	Repetición	RETURN BACK	Back / Return
LENTO	Lento	TIMER SLEEP	Sleep / Timer
RETRO RÁPIDO	<<	TUNE-	<< / Tune-
AV RÁPIDO	>>	TUNE+	>> / Tune+
SALTO-	I<<	PRESET-	I<< / Preset-
SALTO+	>>I	PRESET+	>>I / Preset+
PARADA	Parada	HOLD	Stop / Hold
PAUSA/FOTOG	Pausa/Fotog	STEP - FREEZE	Pause / Step / Freeze
REPRODUCCIÓN	Reproducción	SLOW	Play / Slow

Original	Substituto

