










 
 








 


 
 

 

 





Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Pre Ch
	Source		AV
	Sound	 + 	Shift + Dual
	Picture		Format

Original	Substituto	Original	Substituto
	Audio 1/2		Dual
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Sleep		Sleep
	CH+		Ch +
	CH-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Index		Back





Original		Substituto	
	Text		Text
	List		List
	Hold		Smart
	Subtitle		Subt
	Info		Info
	Cancel		Exit
	Reveal		TV/R
	Zoom		Eject

Original		Substituto

