



Original	Substituto	Original	Substituto
PROGRAM	TV/Radio /		
-10/Fol-	CH- / Page-		
+10/Fol+	CH+ / Page+		
Play USB	Play / Slow		
Pause USB	Pause / Step / Freeze		
I<<	I<< / Preset-		
<<	<< / Tune-		
>>	>> / Tune+		
>>	>> / Preset+		
Stop	Stop / Hold		
Repeat/Random	Green / APP / Repeat		
Vol-	Vol-		
Vol+	Vol+		

Original	Substituto

