 



 
 





 



 

 

 



 







 
 

 

 
 



 



 

 

 

 



 
 
 

 






 

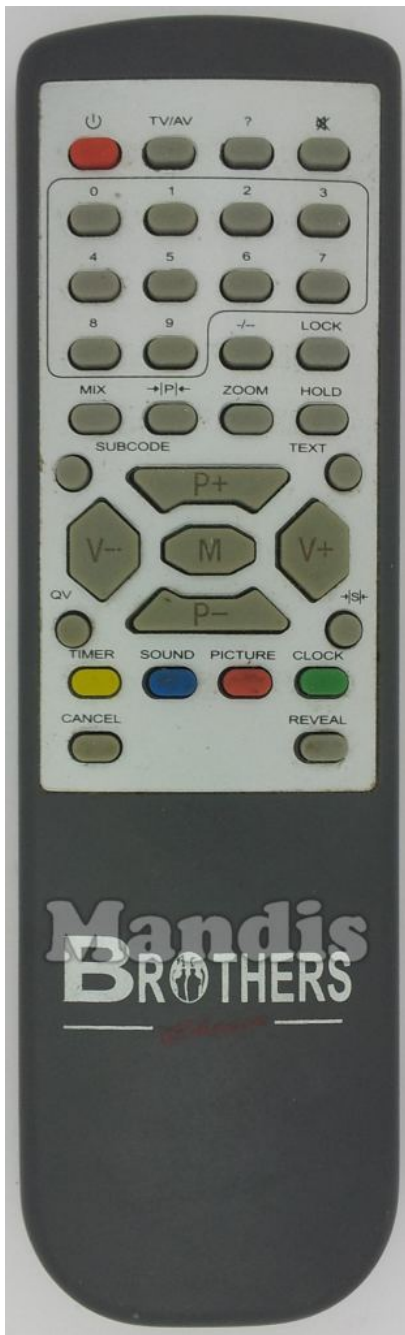 







 
 

 
 


Original	Substituto	Original	Substituto
	Power		Power
	Tv/AV		SRC
	?		VOD
	Mute		MUTE
	0		0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		-/-- / EPG
	Lock		P/C / FAV
	Zoom		WIDE
	Hold		Subt.
	→ P ←		V-FOR
	Mix		MEDIA
	Text		TEXT
	Subcode		OPT+
	QV		TV/R
	→ S ←		Audio
	Cancel		EXIT
	Reveal		BACK
	Yellow/Timer		Yellow (C)
	Blue/Sound		Blue (D)
	Red/Picture		Red (A)
	Green/Clock		Green (B)
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT





Original	Substituto	Original	Substituto
 OK	 OK		
 P+	 CH +		
 P-	 CH -		
 Vol+	 VOL +		
 Vol-	 VOL -		
 M	 MENU		

