 



 

 



 

















 





 








Original	Substituto
 P100	 Display / Media
 Power	 Power
 REV	 << / Tune-
 Doub	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 Hold	 Stop / Hold
 4	 4
 5	 5
 6	 6
 Sub	 Subtitle / EQ
 Update	 D.Menu / Top
 7	 7
 8	 8
 9	 9
 Mix	 Text / Goto

Original	Substituto
 AV	 AV / Input / RDS
 0	 0
 -/--	 Guide / EPG / -/--
 P+	 CH+ / Page+
 Up	 Up
 Mute	 Mute / Dimmer
 TV/TXT	 TV/Radio /
 Menu	 Menu / Home
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Swap	 Back / Return
 P-	 CH- / Page-
 Down	 Down
 16:9	 Picture / Format





Original	Substituto
	 Red  Red / Netflix / Search
	 Green  Green / APP / Repeat
	 Yellow  Yellow / YouTube / Repeat
	 Blue  Blue / Prime Video / Random
	 Violet  Smart / List
	 [ ]  Setup / OPT /
	 [ ]  Sound / Title
	 PP  Shift + Smart / List

Original	Substituto

