





| Original  | Substituto | Original  | Substituto |
|---|------------|---|------------|
|    | Power      |    | Power      |
|    | Eject      |    | Eject      |
|    | Mute       |    | Mute       |
|    | OSD / Info |    | Info       |
|    | V-Mode     |    | Smart      |
|    | P/N / Fav  |    | Pre Ch     |
|    | 1          |    | 1          |
|    | 2          |    | 2          |
|    | 3          |    | 3          |
|    | 4          |    | 4          |
|   | 5          |   | 5          |
|  | 6          |  | 6          |
|  | 7          |  | 7          |
|  | 8          |  | 8          |
|  | 9          |  | 9          |
|  | 0          |  | 0          |
|  | 10+        |  | Shift +    |
|   |            |  | Guide      |

| Original  | Substituto   | Original  | Substituto |
|---|--------------|---|------------|
|    | Goto         |    | Media      |
|    | Setup        |    | Options    |
|    | Angle        |    | Format     |
|    | Text / Title |    | Text       |
|    | Subtitle     |    | Subt       |
|    | Menu         |    | Menu       |
|    | Up           |    | Up         |
|    | Left         |    | Left       |
|    | Enter        |    | Ok         |
|    | Right        |    | Right      |
|   | Down         |   | Down       |
|  | PBC / EPG    |  | Guide      |
|  | Source       |  | AV         |
|  | Exit         |  | Exit       |
|  | <<           |  | <<         |
|  | >>           |  | >>         |
|  | Play / Pause |  | Play       |



