 



 







 

 

 



 


 
 

 


 















 




















Original	Substituto	Original	Substituto
 Power	 Power	 Play	 Play / Slow
 Mute	 Mute / Dimmer	 Up	 Up
 Display	 Display / Media	 Down	 Down
 Time	 Sleep / Timer	 Left	 Left
 Sub-T	 Subtitle / EQ	 Right	 Right
 Movie	 Red / Netflix / Search	 OK	 OK
 Music	 Sound / Title	 S-Time	 Setup / OPT /
 Photo	 Yellow / YouTube / Repeat	 Repeat	 Green / APP / Repeat
 File	 Blue / Prime Video / Random	 S-Mode	 Guide / EPG / -/-
 Setup	 D.Menu / Top	 M-Slide	 AV / Input / RDS
 Home	 Shift + Home / Menu /	 Zoom	 Zoom / Size
 <<	 << / Tune-	 Audio	 Audio / Lang I/II
 >>	 >> / Tune+	 Vol+	 Vol+
 I<<	 I<< / Preset-	 Vol-	 Vol-
 >>I	 >>I / Preset+		
 Menu	 Menu / Home		
 Stop	 Stop / Hold		

