

 
 

 
 




Original	Substituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause/[≡]	 Pause / Step / Freeze
 Stop/[≡+]	 Stop / Hold
 Rec/[≡◆]	 Rec / Rec Mode
 <</[≡o]	 << / Tune-
 <</[≡i]	 << / Preset-
 >> /[≡?]	 >> / Preset+
 >>/[≡x]	 >> / Tune+
 Info	 Info / Angle
 OI/II/Audio	 Audio / Lang I/II
 [≡]	 Text / Goto
 ←/<x]	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3

Original	Substituto
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *	 Setup / OPT /
 0	 0
 Up	 Up
 [→]	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 Vol+	 Vol+









 






 


 









 



 





 





 



 










 
 











Original	Substituto	Original	Substituto
 Home / Source	 Menu / Home		
 P+	 CH+ / Page+		
 Vol-	 Vol-		
 P-	 CH- / Page-		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 EPG	 Guide / EPG / -/--		
 List	 Smart / List		
 Q.Menu	 D.Menu / Top		





Original	Substituto	Original	Substituto
 Power	 Power	 4	 4
 Mute	 Mute / Dimmer	 5	 5
 Play	 Play / Slow	 6	 6
 Pause [/≡]	 Pause / Step / Freeze	 7	 7
 Stop/[≡+]	 Stop / Hold	 8	 8
 Rec/[≡◆]	 Rec / Rec Mode	 9	 9
 <</[≡o]	 << / Tune-	 *	 Setup / OPT /
 <</[≡i]	 << / Preset-	 0	 0
 >> /[≡?]	 >> / Preset+	 [→]	 AV / Input / RDS
 >> /[≡x]	 >> / Tune+	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 O) /II/Audio	 Audio / Lang I/II	 OK	 OK
 [≡]	 Text / Goto	 Right	 Right
 ←/<x]	 Fav / Marker / PC	 Down	 Down
 1	 1	 Netflix	 Shift + Red / Netflix /
 2	 2	 YouTube	 Shift + Yellow / YouTube /
 3	 3	 Vol+	 Vol+





Original	Substituto	Original	Substituto
Home/Source	Menu / Home		
P+	CH+ / Page+		
Vol-	Vol-		
P-	CH- / Page-		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
EPG	Guide / EPG / -/--		
List	Smart / List		
Q.Menu	D.Menu / Top		

